

LANTERN INSTRUCTIONS

- 1) Remove the battery door from the base of the unit.
- 2) Insert 3 "D" batteries into the battery holder and replace the door.
- 3) Pressing the power button toggles between 10 LED lights and 20 LED lights.

IMPORTANT NOTES: Never use both power sources simultaneously. Remove batteries if using optional AC power source. Remove batteries if not in use for a prolonged period of time.

The LED bulbs are not replaceable. Do not attempt to open the light housing as this may cause permanent damage to the unit. Never leave lantern outdoors for prolonged periods, or in bad weather. Keep out of the reach of children.

BATTERY WARNING:

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not dispose batteries in a fire—batteries may leak or explode.

