

# CORDLESS MEDITATION FOUNTAIN

## USE, CARE & SAFETY INSTRUCTIONS

READ CAREFULLY & KEEP FOR FUTURE REFERENCE



### • SET-UP INSTRUCTIONS:


Item includes: 1-Main Fountain Body, 1-Bag of River Rocks.

1. Carefully remove product and accessories from package. Keep packaging for safe storage.
2. After inserting batteries and filling water reservoir, place rocks in the desired area as decoration, avoiding the water intake area.

### • BATTERY OPERATION: (Uses 2 "AA" batteries)


1. Ensure water reservoir is empty before inserting batteries.
2. Battery compartment is located on the bottom of fountain.
3. Slide battery compartment cover in direction of arrow to unlock and open.
4. Insert proper sized batteries with correct polarity. (See diagram)
5. Close and slide battery compartment cover back to the locked position after completion.

(Diagram )

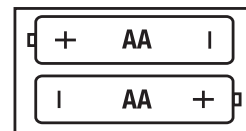

### • BATTERY WARNING:

1. Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (nickel hydride).
2. Do not mix old and new batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the unit before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Exhausted batteries are to be removed.
7. The supply terminals are not to be short-circuited
8. Only batteries of the same or equivalent type as recommended are to be used.
9. Batteries are to be inserted with the correct polarity (see diagram).

 Use DC3V UL approved adapter only (3V, 250mA) (optional, not included)  
DO NOT use adapter with the fountain continuously for longer than 72 hours. It may cause damage to the fountain.

### • TO ACTIVATE:

1. The ON/OFF control switch is located on back of item.
2. Replace batteries when running water slows.

### • FILLING AND DRAINING WATER RESERVOIR:

1. Fill the water reservoir with approximately 6 to 8 oz. of clean water or until a steady, full stream is achieved. Do not overfill reservoir as it may cause splashing or leak.
2. Never operate fountain without water, refill reservoir when necessary.
3. TO DRAIN: remove rock and then slowly turn the fountain upside down.

### • MAINTENANCE:

1. To reduce mineral deposits and bacteria build-up, replace the water every 2 weeks.
2. Add water regularly to reduce the influence of water evaporation and to ensure the pump works normally.
3. During long periods of non-use, remove the batteries, water and store in a cool, dry location protected from direct sunlight.

### • SAFETY INSTRUCTIONS:

1. Display the fountain on a flat, stable surface only.
2. This item is for indoor use only. It is not a toy. For decorative purposes only.
3. Replace batteries regularly to avoid the risk of corrosion.
4. Fill the reservoir with adequate amount of water. Insufficient amount of water may lead to improper pump functioning with irregular noise.
5. Turn the switch to "OFF" when left unattended for an extended period.
6. Close supervision is necessary when the product is used by or near children, invalids or disabled persons.