

SLATE TOWER FOUNTAIN

USE, CARE & SAFETY INSTRUCTIONS

READ CAREFULLY & KEEP FOR FUTURE REFERENCE



SET-UP INSTRUCTIONS:


Item includes: 1-Main Fountain Body, 1-Bag of River Rocks.

1. Carefully remove product and accessories from package. Keep packaging for safe storage.
2. After inserting batteries (see below) and filling water reservoir, place rocks in the desired area as decoration, avoiding the water intake areas.

BATTERY OPERATION: (Uses 2 "AA" batteries)

1. Ensure water reservoir is empty before inserting batteries.
2. Battery compartment is located on the bottom of fountain.
3. Slide battery compartment cover in direction of arrow to unlock and open.
4. Insert 2 "AA" batteries with correct polarity. (See diagram)
5. Close and slide battery compartment cover back to the locked position.


(Diagram)

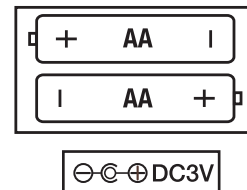

BATTERY USAGE:

Adult supervision is required when changing batteries.

1. Do not recharge non-rechargeable batteries.
2. Do not dispose of batteries in fire, they may leak or explode.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. Do not mix old and new batteries.
5. Use only batteries of the same or equivalent type as recommended by the manufacturer.
6. Insert batteries with correct polarities and always follow battery manufacturer's instructions.
7. Remove exhausted batteries from product.
8. Do not short-circuit supply terminals.

 Use DC3V UL approved adapter only (3V, 250mA) (optional, not included). DO NOT use adapter with the fountain continuously for longer than 72 hours. It may cause damage to the fountain.

USE:

1. The ON/OFF control switch is located on the back of item.
2. Replace batteries when running water slows.

FILLING AND DRAINING WATER RESERVOIR:

1. Fill the water reservoir with approximately 6 to 8 oz. of clean water until a steady, full stream is achieved. Do not overfill reservoir as it may cause splashing or leaks.
2. Never operate fountain without water. Refill reservoir when necessary.
3. TO DRAIN: Remove rocks and then slowly turn the fountain upside down.

MAINTENANCE:

1. To reduce mineral deposits and bacteria build-up, replace the water every 2 weeks.
2. Add water regularly to account for water evaporation and to ensure the pump works normally.
3. During long periods of non-use, remove the batteries, drain water and store in a cool, dry location protected from direct sunlight.

SAFETY INSTRUCTIONS:

1. Display the fountain on a flat, stable surface only.
2. This item is for indoor use only. It is not a toy. For decorative purposes only.
3. Replace batteries regularly to avoid the risk of corrosion.
4. Fill the reservoir with adequate water. Insufficient amount of water may lead to improper pump functioning with irregular noise.
5. Turn the switch to "OFF" when not in use or if left unattended for an extended period.
6. Close adult supervision is necessary when the product is used by or near children, elderly or disabled persons.