

SAVAGE™

RADIO CONTROLLED ROBOT CAR

OPERATING INSTRUCTIONS

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not submerge car or controller in water.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your car in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.

BATTERY INFORMATION

The operation requires Ni-Cad battery pack (included) for car and one 9V battery (included) for radio control.

- Carefully remove items from package.
- Locate the battery compartment on the back of each item.
- Unfasten latch on bottom of car to release battery pack and replace batteries following the correct polarities.
- Replace the battery compartment door.
- Slide open the battery compartment door of the controller.
- Insert the one 9V battery following the correct polarities.
- Replace the battery compartment door.



Includes full-function wireless radio control, rechargeable Ni-Cad battery pack and charger.

CAUTION:
Do not place hands on back during transformation.



FORWARD



BACK-UP



RIGHT TURN



LEFT TURN

• Note - All turning is performed by back wheels.

MODES:



ROBOT MODE



CAR MODE



DO NOT OPERATE IN MID LEVEL MODE