

ANIMATED SAFARI LAMP

Instructions

CONTENTS

 


(1) SAFARI LAMP


ASSEMBLY

Note: Setup requires adult supervision. Display Animated Safari Lamp on a flat surface

OR



OPERATION

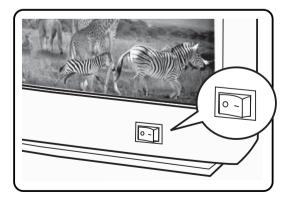

The Safari Lamp is operated with the ON/OFF switch (no batteries required).

- Ensure that the Safari Lamp is in a location that children cannot reach or access.
- Plug the Safari Lamp into a standard electrical outlet.
- Turn on the switch to activate the Safari Lamp.
- Turn off the switch when not in use.

WARNING:

THIS ITEM IS INTENDED FOR DECORATIVE PURPOSES ONLY, IT IS NOT A TOY AND SHOULD NEVER BE USED WITHOUT ADULT SUPERVISION. THE ITEM SHOULD BE PLACED ON A FLAT SURFACE OUTSIDE THE REACH OF CHILDREN.

Do not immerse in water or liquid of any kind.

OFFICIAL LICENSED PRODUCT

© 2009 Discovery Communications, LLC. Discovery Kids and the Discovery Kids logo are trademarks of Discovery Communications, LLC, used under license. All rights reserved. discoverykids.com ©2009 MerchSource, LLC. All rights reserved. Distributed by MerchSource, LLC, Foothill Ranch, CA 92610.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notice forms on this manual is not permitted.



