

THE **BLACK** SERIES™

by **shlft**™

LICENSED PRODUCT

©2009 MerchSource, LLC. All rights reserved.
Distributed by MerchSource, LLC, Foothill Ranch, CA 92610.

Shift3®, The Black Series™, and The Black Series by Shift3™, and all associated logos are trademarks of MerchSource, LLC.

PATENT PENDING

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this manual.

Printed in China

THE **BLACK** SERIES™

by **shlft**™

hands-free soap dispenser




User Manual

Replacing Batteries


Ensuring that the reservoir cap (fig.2) is secure, turn dispenser over and locate the battery compartment on the bottom of the unit (fig.1). Remove battery compartment cover using a screwdriver and insert 4 AA batteries per the polarity diagram on the dispenser. Please note this item is not designed for use with rechargeable batteries. Make sure to use only alkaline batteries.

(fig.1)

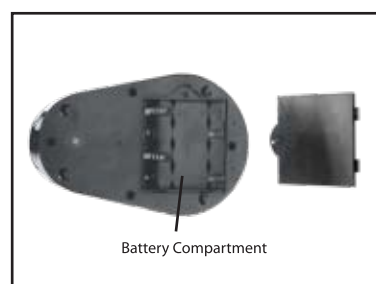

Battery Compartment

(fig.2)

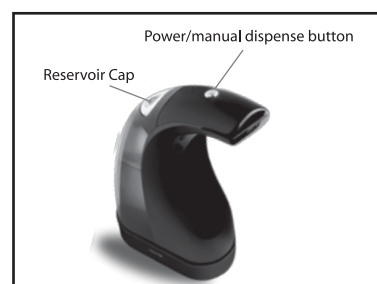

Power/manual dispense button

Reservoir Cap

Filling with Liquid

Remove reservoir cap (fig.2) by turning counter-clockwise. Fill with soap (or other liquid/lotion of similar thickness) and replace cap securely.

NOTE: The first time you use the dispenser, you will need to run the manual pump function for a few seconds until liquid dispenses. (See Manual Dispensing instructions.)

Automatic Dispensing

Placing a hand beneath the nozzle and near the sensor (fig.3) should start a short flow of liquid. Removing and replacing hand under sensor will start a new flow.


Manual Dispensing

Following automatic dispensing instructions begin flow of liquid. While liquid is flowing, press the power/manual dispense button (fig.2). The liquid will flow continuously until the power/manual dispense button is pressed again.

Powering On/Off

Turn on dispenser by pressing and holding for 2 seconds the power/manual dispense button (fig.2). The LED indicator (fig.3) will flash 3 times. (To turn off the dispenser, press and hold the power/manual dispense button for 3 seconds. The LED light will illuminate for 2 seconds indicating that the dispenser has been turned off.)

(fig.3) Nozzle

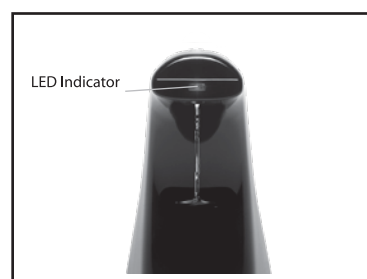

LED Indicator

(fig.4) Sensor



Nozzle
Sensor

Low-Battery Indicator

The dispenser may not work properly when the battery is low. The LED indicator will flash continuously when battery power is low. See Replacing Batteries instructions to replace old batteries.

Warning

- Once product is filled with liquid, do not flip product upside down as this will cause leakage.
- In order to empty reservoir, dilute any remaining soap with water and activate dispenser until empty.
- Make sure liquid soap is clean of any residue as this may cause the dispenser to get blocked.
- Extreme light changes may cause the unit to dispense liquid. If this occurs, try repositioning the soap dispenser.